

### MIXING INSTRUCTIONS

#### MIXING:

1. Measure equal proportions from each jar using separate spatulas. Replace lids on the correct jars, according to colour sticker (see Fig below).
2. Mix thoroughly until colour is quite uniform.

#### APPLICATION:

1. Using a suitable tool (putty knife, trowel, etc.) spread and work onto surface. Remove excess and clean surrounding surface with a damp cloth. Smooth by stroking lightly with tool or wet finger when partially set.

#### CAUTION:

Although this product contains the mildest ingredients, hands should be washed after use. A barrier cream should be applied to hypersensitive skins or when using frequently.

### GENERAL INSTRUCTIONS

#### IN THE EVENT OF THE CONTENTS BEING TOO STIFF TO WORK EASILY, WARM THE JARS IN HOT WATER AND STIR CONTENTS GENTLY

1. Remove dirt, grease, rust and paint from the application surfaces by wire brushing, scraping or sanding. Oil or grease should be removed using any non-oily solvent. The rougher the cleaned surfaces the better.
2. In cold weather slight warming of the jars will make mixing and application easier.
3. The two components must be mixed in equal proportions. Do not mix more than can be used in 15 to 20 minutes.
4. Use separate spatulas for each jar. Do not mix the lids of the jars. Reseal jars properly after use.


5. This product will set hard in 3 to 6 hours depending on ambient temperature, and cure to maximum strength in 24 hours. Hardening and curing can be accelerated by heating to not more than 150° C. Warming is recommended in cold weather to avoid an unduly long curing period.

### SOME SUGGESTED USES:

1. Seal cracked pipes and floors.
2. Fix loose screws and tiles.
3. Grouting window frames etc. into brickwork.
4. Repair boat hulls, cars and caravans.
5. Repair cracks in toilets, basins and baths.
6. Repair floortiles and flooring.
7. Fill cracks and chips in stairs.
8. Seal gutters, gutter pipes and roofs.

**Pratley (Pty) Ltd.**  
14 Jackson Street • Factoria 1739  
Gauteng • South Africa.  
Tel: +27 11 955-2190/8  
Fax: +27 11 955-3918  
[www.pratleyadhesives.com](http://www.pratleyadhesives.com)

9101  
21/6/2024

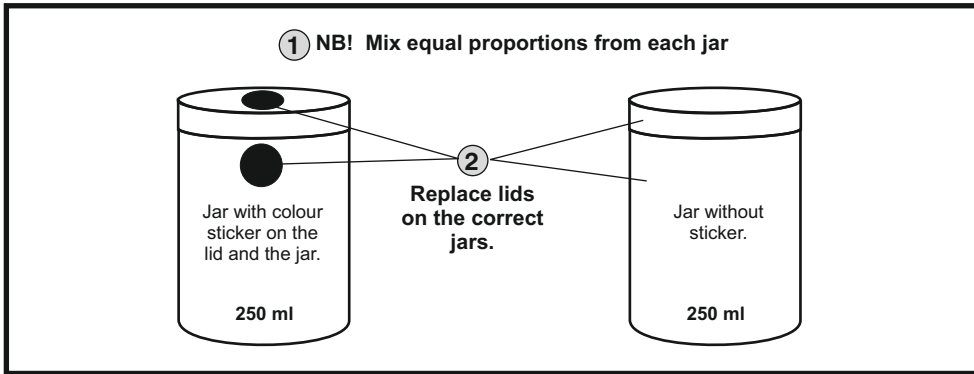

### VERMENGINGSAAWYSINGS

#### VERMENGING:

1. Gebruik afsonderlike strykmesse. Meet gelyke hoeveelhede van elke houër af. Plaas deksels, volgens kleurplakker (sien skets hieronder) terug op korrekte houër.
2. Meng deeglik tot 'n egalige kleur.

#### AANWENDING:

1. Gebruik 'n geskikte instrument (stopmes, troffel, ens.) Versprei en smeer in die oppervlak in. Verwyder oortollige kleefstof en maak met 'n klam lap rondom skoon. Sodra dit deels hard is, stryk liggies met 'n nat instrument of nat vinger.

#### WAARSKUWING:

Alhoewel hierdie produk die sagste bestanddele bevat, behoort hande deeglik na gebruik daarvan gewas te word. Gebruik 'n beskermingsroom vir uiters sensitiewe velle of indien daar dikwels met die produk gewerk word.

### ALGEMENE AANWYSINGS

#### INDIEN INHOUD TE STYF IS VIR MAKLIKE HANTERING, VERHIT HOÛERS IN WARM WATER EN ROER DIE INHOUD LIGGIES.

1. Verwyder vullis, vetterigheid, roes en verf van aanwendingsvlakke met 'n draadborsel of skuurpapier of deur dit af te krap. Olie- of vetterigheid behoort met 'n nie-oliegige oplosmiddel afgevee te word. Hoe growwer die skoongemaakte vlakke, des te beter.
2. Verhitting van die houër in koue weer sal die aanmaak en aanwending vergemaklik.
3. Die twee bestanddele moet in gelyke verhoudings gemeng word. Moet nooit meer as wat binne 15 tot 20 minute gebruik kan word, aanmaak nie.
4. Gebruik afsonderlike strykmesse vir elke houër. Sorg dat die deksels nie deurmekaar raak nie. Verseël houers deeglik na gebruik.

5. Afhangende van omgewingstemperatuur, sal die produk binne 3 tot 6 uur hard wees en na 24 uur tot 'n maksimum sterkte verhard. Verharding en settyd kan deur nie meer as 150°C verhitting verhaas word. Om 'n onnodige lang verhardingsproses te vermy in koue weer word verhitting aanbeveel.

### VOORGESTELDE GEBRUIKE:

1. Om krake in pype en vloere te verseël.
2. Om los skroewe en teëls vas te maak.
3. As voegvulsel vir vensterrame in messelwerk.
4. Om boot rompe, motors en woonwaens te herstel.
5. Om krake in toilette, wasbakke en baddens las.
6. Om vloerteëls en blokke te herstel.
7. Om krake en gesplinterde trappe te vul.
8. Om geute, geutpype en dakke te verseël.

**Pratley (Edms) Bpk.**  
14 Jackson Straat • Factoria 1739  
Gauteng • Suid-Afrika.  
Tel: +27 11 955-2190/8  
Faks: +27 11 955-3918  
[www.pratleyadhesives.com](http://www.pratleyadhesives.com)

9101  
21/6/2024

